


OPTION 2

OPTION 1

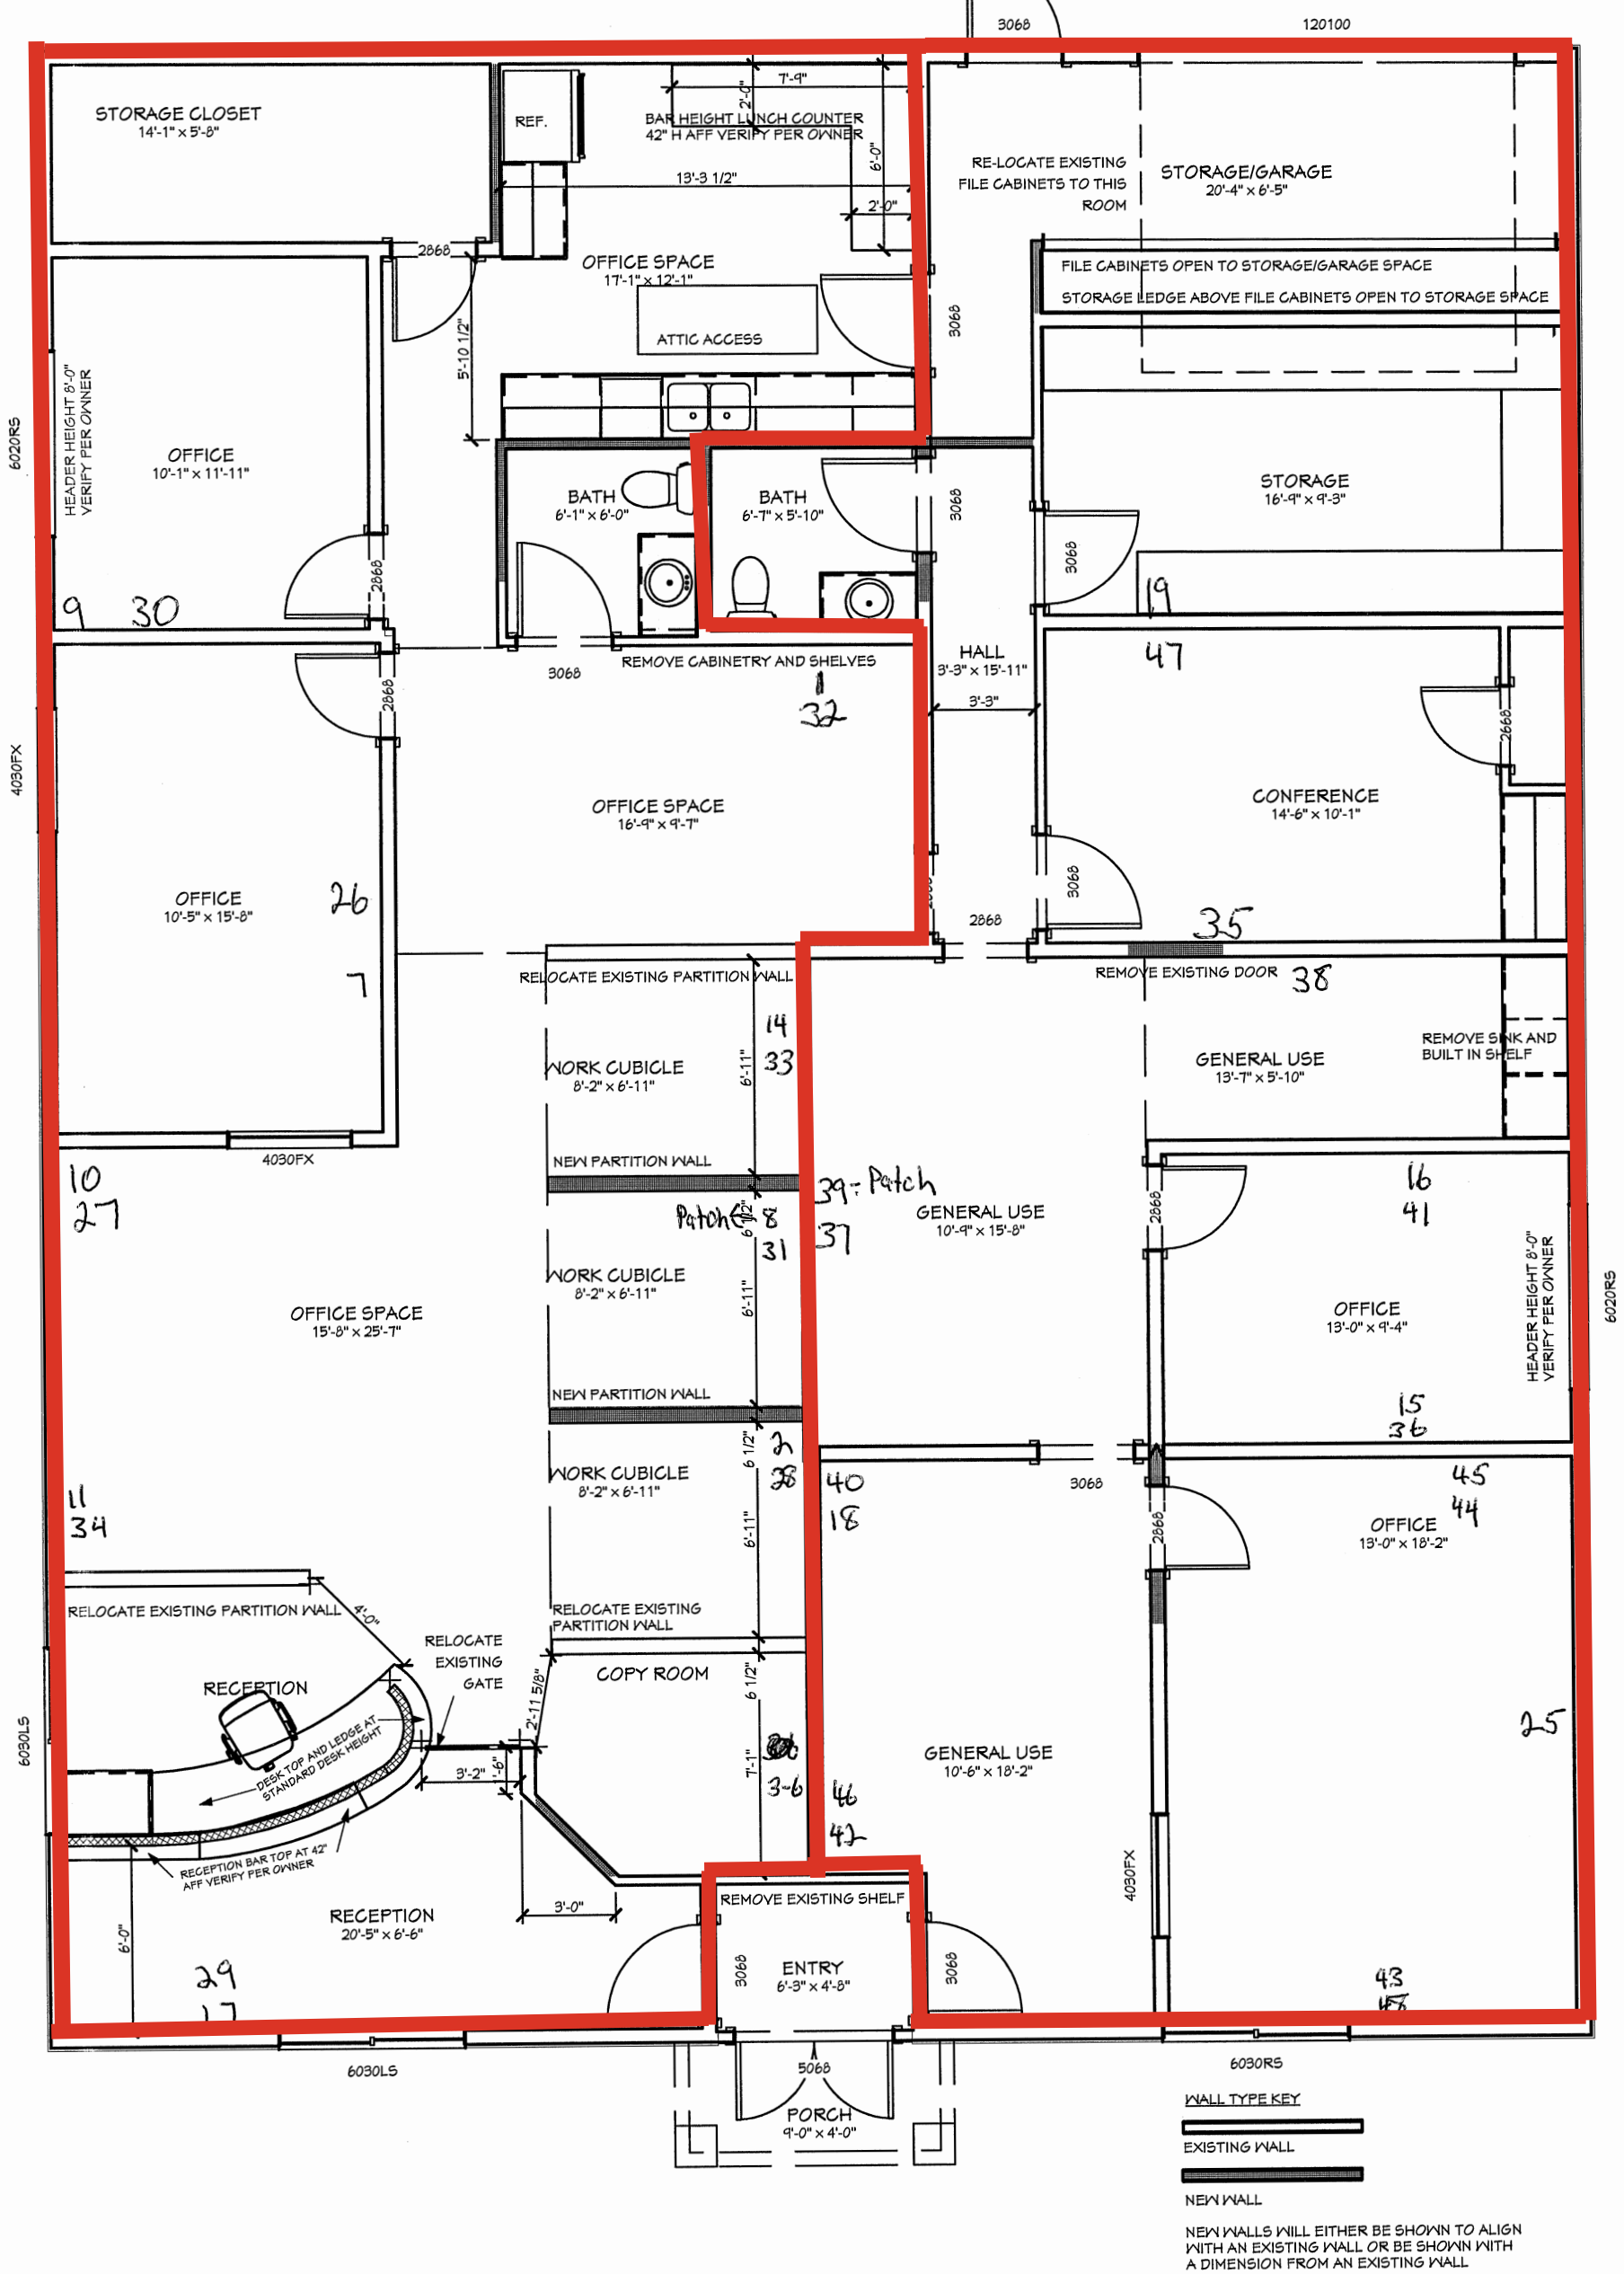

CALL BEFORE YOU DIG!

NOTE TO CONTRACTORS:

WITHIN 48 HOURS OF YOUR JOB'S COMMENCEMENT, YOU MUST CALL 811 OR 800-DIG-TESS BEFORE YOU EXCAVATE. YOUR PROJECT SITE'S UNDERGROUND UTILITIES WILL BE MARKED ON-SITE, FREE OF CHARGE, AND YOU CAN AVOID COSTLY REPAIRS OR POTENTIALLY DEADLY ACCIDENTS.